

⚠ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH** of **CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Battery type: silver oxide SR927SW.
- Nominal battery voltage: 1.5 V
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above 140°F (60°C) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

⚠ AVERTISSEMENT

- **RISQUE D'INGESTION** : ce produit contient une pile bouton.
- Avaler une pile bouton peut entraîner d'importantes blessures, et même la **MORT**.
- L'ingestion d'une pile bouton peut causer des **Brûlures Chimiques Internes** en seulement **2 heures**.
- **CONSERVEZ** les piles neuves et usagées **HORS DE PORTÉE** des **ENFANTS**.
- **Appelez les soins médicaux d'urgence** si vous suspectez qu'une pile a été avalée ou insérée dans une partie du corps.



- Retirez immédiatement les piles usagées ou éliminez-les en accord avec les lois locales. Gardez-les hors de portée des enfants. Ne les jetez pas aux ordures ménagères dans la poubelle domestique. Ne jetez pas de piles dans un feu.
- Même des piles usagées peuvent causer des blessures graves ou mortelles.
- Appelez votre centre antipoison pour connaître le traitement en cas d'ingestion.
- Type de pile : oxyde d'argent SR927SW
- Tension nominale de la pile : 1.5 V
- Les batteries non-rechargeables ne doivent en aucun être rechargées.
- Ne forcez pas la décharge ou la recharge des piles. Ne les désassemblez pas. Ne les exposez pas à une température supérieure à 60°C (140°F). Ne les jetez pas dans le feu. Cela peut provoquer des blessures dues à des émanations gazeuses, à des fuites ou à une explosion avec pour conséquence des brûlures chimiques.
- Assurez-vous que les polarités (+ et -) de la pile sont respectées.
- Ne mélangez pas des piles neuves et usagées, de marques ou de types différents tels que carbone-zinc, alcalines, ou rechargeables.
- Retirez puis recyclez ou éliminez immédiatement les piles des équipements qui n'ont pas été utilisés depuis longtemps, en accord avec les lois locales.
- Assurez-vous de toujours sécuriser le compartiment à piles. S'il ne se ferme pas correctement, arrêtez d'utiliser le produit. Retirez les piles et conservez-les hors de portée des enfants.

TIMEX

Moon Phase and Sun/Moon

USER GUIDE.....1	ユーザガイド.....9
GUÍA DEL USUARIO.....2	ИНСТРУКЦИИ ПО ЭКСПЛУАТАЦИИ.....10
MODE D'EMPLOI.....3	UŽIVATELSKÁ PŘÍRUČKA.....11
GUIA DO USUÁRIO.....4	HASZNÁLATI ÚTMUTATÓ.....12
GUIDA DELL'UTENTE.....5	PRZEWODNIK UŻYTKOWNIKA.....13
BENUTZERHANDBUCH.....6	GHIDUL UTILIZATORULUI.....14
GEbruikersHANDLEIDING.....7	KULLANICI KILAVUZU.....15
用戶指南.....8	

991097447-02

Register your product at <https://www.timex.com/product-registration.html>

Registra tu producto en www.timex.es/es_ES/product-registration.html
timex.com.mx/pages/registro-de-productos

Enregistrez votre produit sur fr.timex.ca/product-registration.html
www.timex.fr/fr_FR/product-registration.html

Registre o seu produto no site www.timex.eu/en_GB/product-registration.html

Registrare il prodotto all'indirizzo www.timex.it/it_IT/product-registration.html

Registrieren Sie Ihr Produkt bei www.timex.de/de_DE/product-registration.html

Registreer uw product bij www.timex.eu/en_GB/product-registration.html

在 www.timex.eu/en_GB/product-registration.html 上注册 的 品

製品登録サイト <https://www.timexwatch.jp/>

Зарегистрируйте свое изделие на сайте www.timex.eu/en_GB/product-registration.html

Zaregistrujte si svůj produkt na www.timex.eu/en_GB/product-registration.html

Regisztrálja termékét a következő címen www.timex.eu/en_GB/product-registration.html

Zachęcamy do zarejestrowania produktu pod https://www.timex.pl/pl_PL/product-registration.html

Înregistrați-vă produsul la adresa www.timex.eu/en_GB/product-registration.html

Şu adresten ürününüzün kaydını gerçekleştirin: www.timex.eu/en_GB/product-registration.html

EXTENDED WARRANTY

Available in U.S. only. Extend your warranty for an additional 4 years from date of purchase for \$5. You can pay with AMEX, Discover, Visa or MasterCard by calling 1 800 448-4639 during normal business hours. Payment must be made within 30 days of purchase. Name, address, telephone number, purchase date, and 5-digit model number required. You can also mail a check for \$5 to: Timex Extended Warranty, P.O. Box 1676, Dept. EF, Little Rock, AR 72203.


Please read instructions carefully to understand how to operate your Timex® watch. **Your model may not have all of the features described in this booklet.**

DAY/DATE/AM/PM/SUN/MOON MODELS


TO SET TIME:

- PULL out crown to "C" position.
- TURN crown clockwise to correct time.
Day/am/pm/moon will also change.
- Push in crown to "A" position

NOTE: Remember to set time for am or pm (sun or moon.)

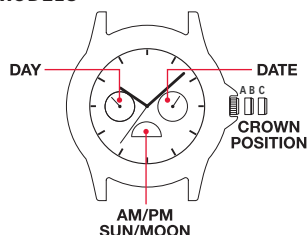

MOON PHASE MULTI-FUNCTION

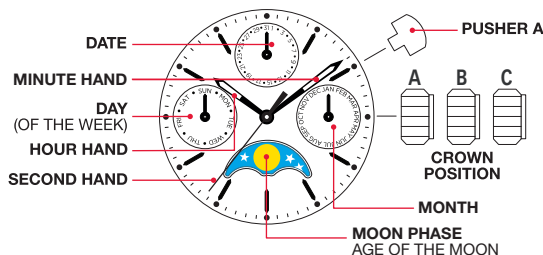

SETTING THE DAY OF THE WEEK AND THE CURRENT TIME

- When the second hand is at 12 o'clock, Pull the crown out to the position "C".
- Turn the crown to advance the hour/minute hands in a clockwise direction until the day sub-dial displays the current day of the week and the current time is displayed correctly, including if it is AM or PM.
- Push the crown in to position "A".

NOTE: Do not set the day by moving the hands in a counterclockwise direction. The day will advance somewhere between midnight and 6AM.

SETTING THE MONTH

NOTE: The month should be set first. If the watch is displaying the day of the month from the 26th to the 31st, follow the instructions below to move it out of this period. The month and date are synchronized such that when adjusting the date at the end of short months (less than 31 days), the month automatically adjusts to the correct date. The month hand begins changing to the next month around midnight of the 30th day. It completes the change around midnight of the 31st. (On the 31st, the position of the month hand is between the current and next month). The month and day will need to be manually adjusted for Leap year.

- Press pusher "A" fully to advance the hand.
- Repeat until the hand is displaying the current month.

SETTING THE DAY OF THE MONTH

- Pull the crown out to the position "B".
- Turn the crown counterclockwise to set the date quickly.
- Push the crown in to position "A".

NOTE: Do not set the date between the hours 9:00p.m. and Midnight as this could prevent the date from properly changing on the next day.


SETTING AND READING THE PHASE OF THE MOON

NOTE: The moon phase display represents the age of the moon, use this as a guide to the age and phase of the moon when viewing or setting this function. The most accurate time to set this function is when there is a full moon or a new moon. Locate a source of the age of the moon (0, 7, 15, 22) or the closest to these four ages. Using the images below, follow this process to place the display in the corresponding image.

- Pull the crown out to the position "B".
- Turn the crown to advance the moon display clockwise until the image best matches the age of the moon.
- Push the crown in to position "A".

New moon Moon's age: 0 Spring tide	First quarter moon Moon's age: 7 Neap tide	Full moon Moon's age: 15 Spring tide	Last quarter moon Moon's age: 22 Neap tide

MOON PHASE WITH DATE

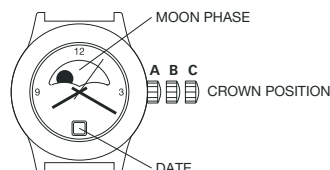

TO SET MOON PHASE:

NOTE: You should set the Moon Phase first, then the time and date. There is no quick set for the Moon Phase function, but this will only need to be done initially and after each battery change.

- PULL out crown to "C" position.
- TURN crown clockwise, noting the date will change around midnight and you will see the Moon Phase advance. Continue until approximately 2am is displayed on the dial.
- TURN crown counterclockwise until approximately 9:30pm
- Repeat steps 2 and 3 until the current phase of the moon is displayed in the moon phase window.
- TURN crown clockwise until the current time is displayed. (See section below on how to adjust the date)
- Push in crown to "A" position

NOTE: The Moon Phase can only be adjusted forward. When traveling across time zones and adjusting the time backwards, the Moon Phase will not adjust backwards but will remain in the same position until the next midnight is reached.

You may refer to the above section named SETTING AND READING THE PHASE OF THE MOON for direction to determine the current phase of the moon or below are the full moon dates, which is the easiest and most accurate method to set this function on the date of the full moon.

	2025	2026	2027	2028	2029	2030		2025	2026	2027	2028	2029	2030
JAN	13	3	22	12	30	19	JUL	10	29	18	6	25	15
FEB	12	1	21	10	28	18	AUG	9	28	17	5	24	13
MAR	14	3	22	11	30	19	SEP	7	26	16	4	22	11
APR	13	2	21	9	28	18	OCT	7	26	15	3	22	11
MAY	12	31	20	8	27	17	NOV	5	24	14	2	21	10
JUN	11	30	19	7	26	15	DEC	5	24	13	31	20	9

TO SET TIME:

- PULL out crown to "C" position.
- TURN crown clockwise to correct time noting the date will change around midnight.
- Push in crown to "A" position

TO SET DATE:

- PULL out crown to "B" position.
- TURN crown until the correct date is displayed.
- Push in crown to "A" position

NOTE: It is not recommended to change the date between 9:30pm and Midnight. During wear if the date changes at noon, you need to adjust the time 12 hours ahead and reset the date.

BATTERY

Timex strongly recommends that a retailer or jeweler replace battery. If applicable, push reset button when replacing battery. Battery type is indicated on caseback. Battery life estimates are based on certain assumptions regarding usage; battery life may vary depending on actual usage. **DO NOT DISPOSE OF BATTERY IN FIRE. DO NOT RECHARGE. KEEP LOOSE BATTERIES AWAY FROM CHILDREN.**

TIMEX INTERNATIONAL WARRANTY

USA and countries other than Canada, European Union and the United Kingdom:

<http://www.timex.com/pages/warranty-repair>

Canada: <https://timex.ca/pages/warranty-repair>

United Kingdom: <https://timex.co.uk/pages/warranty-repair>

European Union: <https://timex.eu/pages/warranty-repair>

©2025 Timex Group USA, Inc. TIMEX® is a registered trademark of TIMEX GROUP in the US and other countries.