

TIMEX

**Moon Phase and Sun/Moon**

USER GUIDE .....	1	ユーザガイド .....	X
GUÍA DEL USUARIO .....	X	ИНСТРУКЦИИ ПО ЭКСПЛУАТАЦИИ .....	X
MODE D'EMPLOI.....	X	UŽIVATELSKÁ PŘÍRUČKA .....	X
GUIA DO USUÁRIO .....	X	HASZNÁLATI ÚTMUTATÓ .....	X
GUIDA DELL'UTENTE .....	X	PRZEWODNIK UŻYTKOWNIKA .....	X
BENUTZERHANDBUCH .....	X	GHIDUL UTILIZATORULUI.....	X
GEBRUIKERSHANDLEIDING .....	X	KULLANICI KILAVUZU.....	X
用戶指南 .....	X		


Register your product at: <https://timex.com/pages/product-registration>

## EXTENDED WARRANTY

**Available in U.S. only.** Extend your warranty for an additional 4 years from date of purchase for \$5. You can pay with AMEX, Discover, Visa or MasterCard by calling 1 800-448-4639 during normal business hours. Payment must be made within 30 days of purchase. Name, address, telephone number, purchase date, and 5-digit model number required. You can also mail a check for \$5 to: Timex Extended Warranty, P.O. Box 1676, Dept. EF, Little Rock, AR 72203.

Please read instructions carefully to understand how to operate your Timex® watch. **Your model may not have all of the features described in this booklet.**

## DAY/DATE/AM/PM/SUN/MOON MODELS

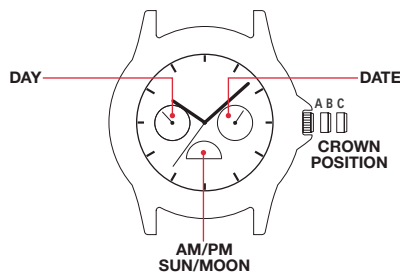


### TO SET TIME:

1. PULL out crown to "C" position.
2. TURN crown clockwise to correct time. Day/am/pm/moon will also change.
3. Push in crown to "A" position

**NOTE:** Remember to set time for am or pm (sun or moon.)

## MOON PHASE MULTI-FUNCTION

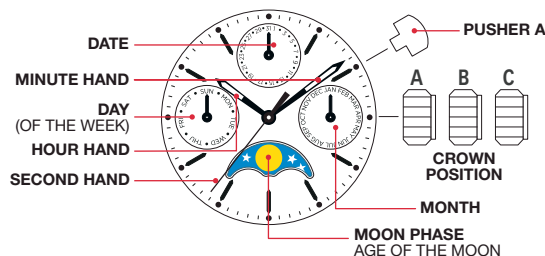

## SETTING THE DAY OF THE WEEK AND THE CURRENT TIME

1. When the second hand is at 12 o'clock, Pull the crown out to the position "C".
2. Turn the crown to advance the hour/minute hands in a clockwise direction until the day sub-dial displays the current day of the week and the current time is displayed correctly, including if it is AM or PM.
3. Push the crown in to position "A".

**NOTE:** Do not set the day by moving the hands in a counterclockwise direction. The day will advance somewhere between midnight and 6AM.

## SETTING THE MONTH

**NOTE:** The month should be set first. If the watch is displaying the day of the month from the 26th to the 31st, follow the instructions below to move it out of this period. The month and date are synchronized such that when adjusting the date at the end of short months (less than 31 days), the month automatically adjusts to the correct date. The month hand begins changing to the next month around midnight of the 30th day. It completes the change around midnight of the 31st. (On the 31st, the position of the month hand is between the current and next month). The month and day will need to be manually adjusted for Leap year.

1. Press pusher "A" fully to advance the hand.
2. Repeat until the hand is displaying the current month.

## SETTING THE DAY OF THE MONTH

1. Pull the crown out to the position B.
2. Turn the crown counterclockwise to set the date quickly.
3. Push the crown in to position "A".

**NOTE:** Do not set the date between the hours 9:00p.m. and Midnight as this could prevent the date from properly changing on the next day.

## SETTING AND READING THE PHASE OF THE MOON

**NOTE:** The moon phase display represents the age of the moon, use this as a guide to the age and phase of the moon when viewing or setting this function. The most accurate time to set this function is when there is a full moon or a new moon. Locate a source of the age of the moon (0, 7, 15, 22) or the closest to these four ages. Using the images below, follow this process to place the display in the corresponding image.

1. Pull the crown out to the position B.
2. Turn the crown to advance the moon display clockwise until the image best matches the age of the moon.
3. Push the crown in to position "A".

New moon Moon's age: 0 Spring tide	First quarter moon Moon's age: 7 Neap tide	Full moon Moon's age: 15 Spring tide	Last quarter moon Moon's age: 22 Neap tide

## BATTERY

Timex strongly recommends that a retailer or jeweler replace battery. If applicable, push reset button when replacing battery. Battery type is indicated on caseback. Battery life estimates are based on certain assumptions regarding usage; battery life may vary depending on actual usage.

DO NOT DISPOSE OF BATTERY IN FIRE. DO NOT RECHARGE. KEEP LOOSE BATTERIES AWAY FROM CHILDREN.

## TIMEX INTERNATIONAL WARRANTY

To view or print our warranty, please click here [http://assets.timex.com/user\\_guides/warranty/Warranty.pdf](http://assets.timex.com/user_guides/warranty/Warranty.pdf)

©2024 Timex Group USA, Inc. TIMEX® is a registered trademark of TIMEX GROUP in the US and other countries.